AWUS036ACH Quick-Start Guide

English

Please be aware this quick-start guide is not intended to be a substitute for the User Manual. To become familiar with all the operating procedures and technical information, be sure to read all information shown during the installation process.

1

https://info.alfa.com.tw/awus036ach

Please go to **https://info.alfa.com.tw/awus036ach** to download the latest driver.

2

After downloading, double-click to install.

3

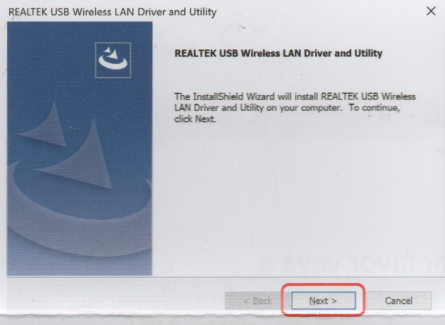
REALTEK USB Wireless LAN Driver and Utility
REALTEK USB Wireless LAN Driver and Utility
The InstallShield Wizard will install REALTEK USB Wireless LAN Driver and Utility on your computer. To continue, click Next.
< Back
Next >
Cancel

Follow the instructions to install.

4

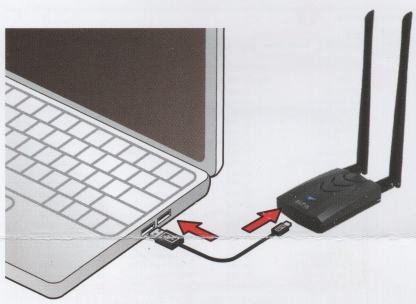

Plug the AWUS036ACH into your PC/laptop.

5

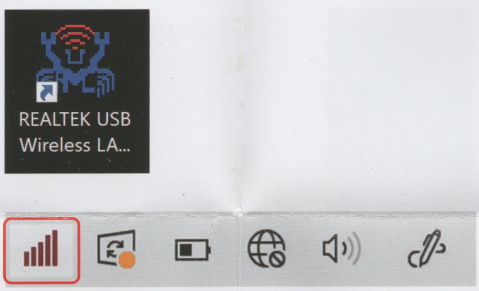

Click desktop icon "**REALTEK USB Wireless LAN Utility**" or on the taskbar "**Utility**" icon.

6

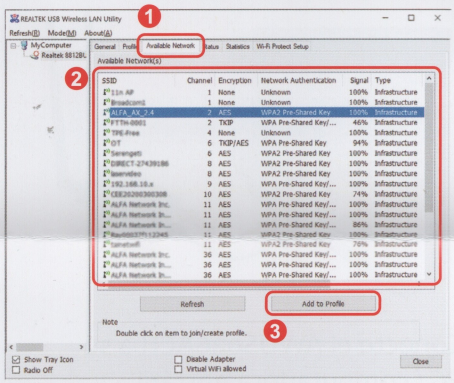

Click "**Available Network**" and select the Network SSID to which you want to connect and click "**add to profile**".

7

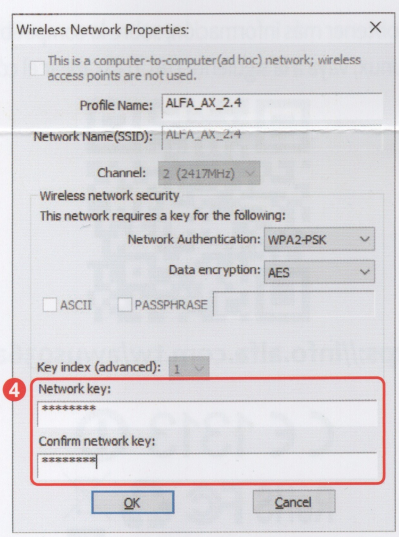

Type in security key (network password) if required and click "**OK**".

8

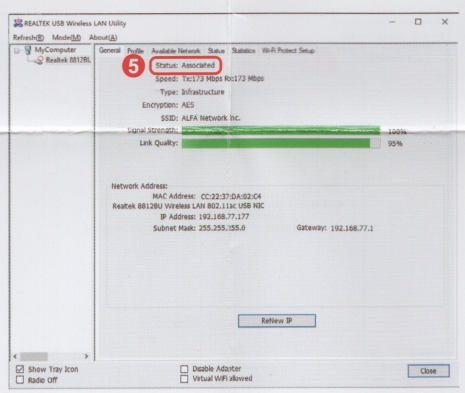

Wait a few seconds, when connected the status will show "**Associated**".

For more information, including Linux support, go to the URL below or scan the code:

https://info.alfa.com.tw/awus036ach

CE 1313 RoHS FC

This product is suitable for use in all EU countries.

© ALFA Network Inc.

AWUS036ACH

Guía de Instalación Rápida

Español

Por favor, tenga en cuenta que esta guía de instalación rápida no es un sustituto del Manual de Usuario. Para familiarizarse con todos los procedimientos e información técnica, asegúrese de leer toda la información mostrada durante el proceso de instalación

1

https://info.alfa.com.tw/awus036ach

Por favor vaya a **https://info.alfa.com.tw/awus036ach** para descargar el programa más reciente.

2

Después de descargarlo, haga doble clic para instalar.

3

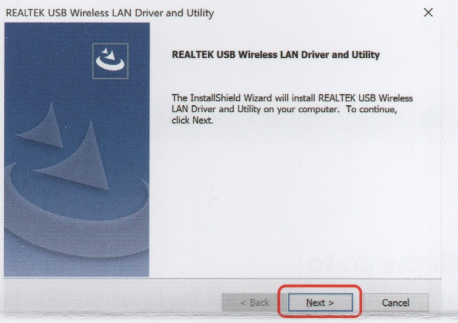
REALTEK USB Wireless LAN Driver and Utility
REALTEK USB Wireless LAN Driver and Utility
The InstallShield Wizard will install REALTEK USB Wireless LAN Driver and Utility on your computer. To continue, click Next.
< Back
Next >
Cancel

Siga las instrucciones para la instalacion.

4

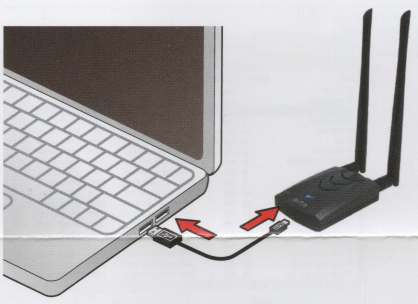

Conecte el AWUS036ACH a su PC / computadora portátil.

5

Haga click en el icono del escritorio "**REALTEK USB Wireless Lan Utility**" o en el icono "**Utility**" de la barra de tareas.

6

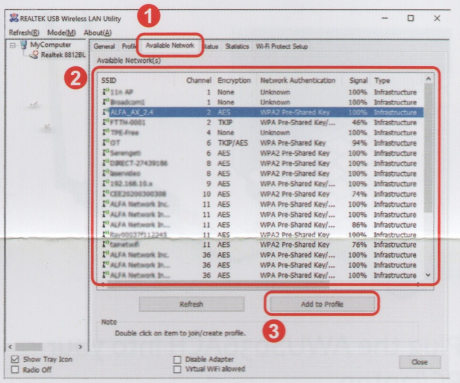

Haga clic en "**Available Network**" y seleccione la red SSID a la que desea conectarse. Una vez conectado seleccione "**add to profile**".

7

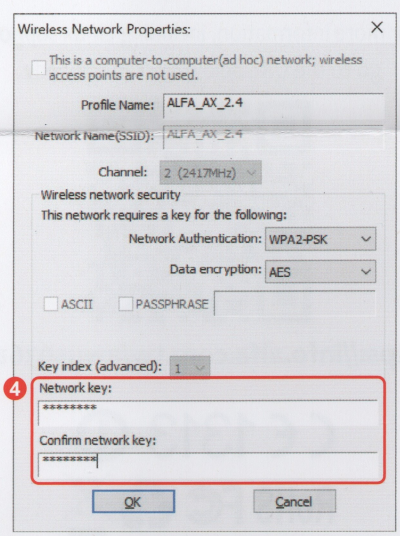

Escriba la clave de seguridad si es necesario y haga clic en "**OK**".

8

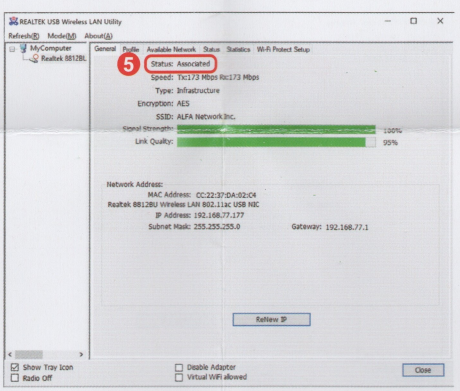

Cuando esté conectado, el estado mostrará "**Associated**".

Para obtener más información, sobre la compatibilidad con Linux, vaya a la siguiente URL o escanear el código:

https://info.alfa.com.tw/awus036ach

CE 1313 !

RoHS FC

Este producto es adecuado para todos los países de la EU.

ALFA Network Inc. © protegido por derechos del autor